# **Shavatron**

Instruction Manual

Model # Domestic: 1020, 1020T Export: 1020EX, 1020TEX





FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

# SAFETY PRECAUTIONS



### **A** DANGER

Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death.

Do NOT immerse any part of this equipment in water.

Do NOT use excessive water when cleaning.

Keep cord and plug off the ground and away from moisture.

Always unplug the equipment before cleaning or servicing.

008GEND1112



#### A DANGER

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.

Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.



#### **A WARNING**

Never put your fingers into the shaver body (the goose-neck or hopper). Serious injury may occur.

017SW1112



### **A WARNING**

ALWAYS wear safety glasses when servicing this equipment.

010GENW1112



### **A** CAUTION

Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment.

Carefully read all instructions before operation.

012GENC1112



#### **A** CAUTION

This machine is NOT to be operated by anyone under the age of 18.

007GENC1112

**NOTE:** Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Company does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)

# **Installation Instructions**

### **Inspection of Shipment:**

Unpack all cartons and check thoroughly for any damage that may have occurred during transit. Damage claims should be filed immediately with the transportation company. Gold Medal is not responsible for damage that occurs in transit.

#### Setup:

Your new Shavatron Ice Shaver Machine is completely assembled and tested at the factory. Remove all packing material and tape before starting operation.

## **Electrical Requirements:**

The following power supply must be provided:

Model No. 1020, 1020T: 120 Volts, 970 Watts, 60 Hz. Model No. 1020EX, 1020TEX: 230 Volts, 820 Watts, 50Hz.



#### DANGER

Machine must be properly grounded to prevent shock in case of electrical problems.

Wall receptacle must be wired as shown on the receptacle. Failure to wire properly will void the warranty and can result in damage to motors, elements, relay, lights, etc.

Your electrician must furnish sufficient current for proper machine operation. We recommend this ice shaver machine be on a dedicated and circuit protected line. Failure to wire properly will void the warranty and can result in damage to the light, motor and etc.

It is Gold Medal Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety risks and the ice shaver's performance will be sacrificed/reduced.

# **Before You Plug In Machine:**

- 1. Make sure that the wall outlet can accept the three (3) prong grounded plug on the power supply cord.
- 2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
- 3. **DO NOT** use a three (3) prong grounded to two (2) prong un-grounded adapter.
- 4. If the optional 1078HD Chute is attached to your machine, follow the installation instructions provided with the 1078HD Chute before operation.

# **Operating Instructions**

Make sure the hopper is clear of obstructions, then secure a supply of ice (either blocks, cubes or rough crushed ice) and fill the hopper. Ice chunks should be no larger than a baseball for maximum capacity (large ice chunks take more time to shave).

- 1. Move the toggle power switch into the "ON" position to illuminate the lights.
- 2. Fill the hopper with ice. Be careful not to overfill.
- 3. Close the hopper lid. The unit will not operate if the lid is not completely closed.
- 4. Push the momentary motor switch.



#### **A** CAUTION

Metal or foreign objects will ruin the shaving blades instantly. Make sure that both the hopper and ice supply are free of debris including: Ice picks, scoops, nails, nuts, bolts, etc.

# Safety Cut-Off Switch

Your Shavatron is equipped with a safety cut-off switch. With the momentary motor switch pressed on, the machine will not operate with the hopper lid open. This is to prevent accidental injury while loading or cleaning the hopper. Be careful not to overfill the hopper to the extent that the hopper lid stays open. The lid must be closed and you must press the momentary motor switch in order for the machine to operate.



## **WARNING**

Never put your fingers or any object into the shaver body while the unit is running. Since you can be seriously hurt by not following these instructions, Gold Medal does not assume any liability for injury due to careless handling or operation of this unit.